

USER MANUAL

Model:L0403

Thank you for purchasing the product
Before using this product, please read this user manual thoroughly so that you can use this product at its full function.

▲ About Auto PIR keyhole led light

- Auto PIR keyhole led light use Pyroelectric Infrared Radial Sensor technology.
- Comes on automatically to illuminate the keyhole as you approach.
- Making safe and convenient entry into your home.
- No more fumbling by your door in the dark, mountable light with built-in PIR sensor.

▲ Caution

- Do not put the product to face to glass door or glazing or the temperature varied place, because this product use passive infrared sensor, so it need jarless environment.
- Please put the light away from monitor and television etc.
- Please note the operating temperature and humidity, otherwise the battery's life will be affected
- Use good quality LR06(AA) or charge battery.
- Design and specifications are subject to change without notice
- After light goes out, 6-8 seconds of delay time, and then resume work.

▲ Check the package content

Unit	*1pc
User manual	*1pc
Package	*1pc

▲ State description

- When turn on power, the light is not on.
Solution: a. Check battery installation
b. When the environment is too bright, so the led light can not work.
c. Battery have no power, please change battery.
- When turn on power, the led light blinking
Solution: a. the led light may take one or two minutes to stabilize.
B. battery may be low power, please change battery.


▲ Specification

- Influence mode: Pyroelectric Infrared Radial Sensor
- Influence control: Light sensor (only use in night, daytime can not work)
- Sensor sensitivity angle: 60 angle
- Sensor sensitivity distance: 3m
- Power: 1.5V, 1PC "AA" Lr06 or Charge-battery (not included)
- LED: Super white led
- LED quantity: 4PCS
- LED life: 10000Hours
- Delay time: Light will be turned off 5 seconds after people leave.
- Standby current: <0.35mA
- Battery life: 5 months (3-5 times/day, Hi-performance Lr06 battery)
- Operating temperature: -5---38°C
- Operating humidity: 5%-93%
- Product size: LXWXH: 81X46X30mm
- Weight: 75g

▲ Installation method

Use M3.0X20mm to fix up the stand.
Use Double-side adhesive tape to fix up the stand

▲ Change battery

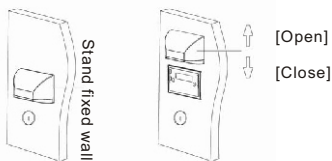

▲ Battery precaution

Be sure to follow the correct polarity when installing battery as indicated in the battery compartment
Reversed battery may cause damage to the device.
Do not use old battery

AUTO PIR LED KEYHOLE LIGHT

USER MANUAL

Model:L0403

Thank you for purchasing the product
Before using this product, please read this user manual thoroughly so that you can use this product at its full function.

▲ About Auto PIR keyhole led light

- Auto PIR keyhole led light use Pyroelectric Infrared Radial Sensor technology.
- Comes on automatically to illuminate the keyhole as you approach.
- Making safe and convenient entry into your home.
- No more fumbling by your door in the dark, mountable light with built-in PIR sensor.

▲ Caution

- Do not put the product to face to glass door or glazing or the temperature varied place, because this product use passive infrared sensor, so it need jarless environment.
- Please put the light away from monitor and television etc.
- Please note the operating temperature and humidity, otherwise the battery's life will be affected
- Use good quality LR06(AA) or charge battery.
- Design and specifications are subject to change without notice
- After light goes out, 6-8 seconds of delay time, and then resume work.

▲ Check the package content

Unit	*1pc
User manual	*1pc
Package	*1pc

▲ State description

- When turn on power, the light is not on.
Solution: a. Check battery installation
b. When the environment is too bright, so the led light can not work.
c. Battery have no power, please change battery.
- When turn on power, the led light blinking
Solution: a. the led light may take one or two minutes to stabilize.
B. battery may be low power, please change battery.


▲ Specification

- Influence mode: Pyroelectric Infrared Radial Sensor
- Influence control: Light sensor (only use in night, daytime can not work)
- Sensor sensitivity angle: 60 angle
- Sensor sensitivity distance: 3m
- Power: 1.5V, 1PC "AA" Lr06 or Charge-battery (not included)
- LED: Super white led
- LED quantity: 4PCS
- LED life: 10000Hours
- Delay time: Light will be turned off 5 seconds after people leave.
- Standby current: <0.35mA
- Battery life: 5 months (3-5 times/day, Hi-performance Lr06 battery)
- Operating temperature: -5---38°C
- Operating humidity: 5%-93%
- Product size: LXWXH: 81X46X30mm
- Weight: 75g

▲ Installation method

Use M3.0X20mm to fix up the stand.
Use Double-side adhesive tape to fix up the stand

▲ Change battery

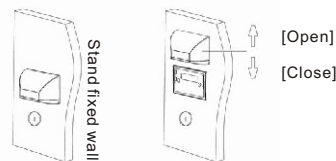

▲ Battery precaution

Be sure to follow the correct polarity when installing battery as indicated in the battery compartment
Reversed battery may cause damage to the device.
Do not use old battery

AUTO PIR LED KEYHOLE LIGHT